

## E. CLIP SPRING TYPE

### 1. Removing links

Insert pin-pusher, one end of fine needle-nose pliers or clip spring adjusting pliers (S-919) in hole (or in open space) of clip spring (Fig. 1). Slide clip spring in the direction of the arrow. (Fig. 2)

### 2. Reassembly

To reassemble, align the links properly and reverse the above procedure. Make sure to press down the clip spring securely into the link.

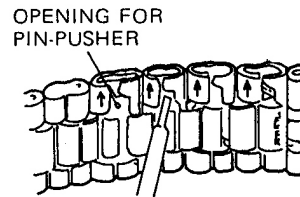


Fig. 1

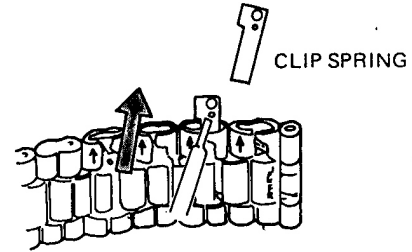


Fig. 2