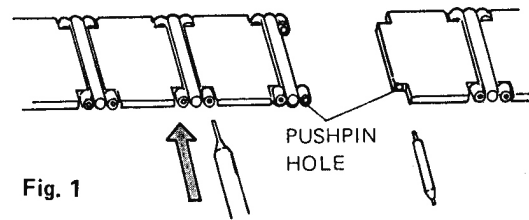


D. PUSHPIN TYPE**1. Removing links**

Using a pin-pusher, press the spring bar in and twist gently for removal. (Fig. 1)

2. Reassembly

To reassemble, reverse the above procedure. That is, insert the pushpin in the body of the link. Make sure that one end of the pin is securely in the pushpin hole, then depress the spring bar until it fits in the top hole of the link.

**Fig. 1**