

.L. SLIDING CLASP TYPE

1. Opening the clasp

Using a screwdriver and/or a pair of tweezers, simply pry open (up) the locking grip for adjustment (Fig. 1) and slide the clasp (up or down) to the desired length of adjustment.

2. Closing the clasp

Press down (close) the locking grip of the clasp unit.

