

.G. TWO SIDE FIXING PIN TYPE

1. Removing links

Place pin-pusher at the middle open space of the links (Fig. 1). Push the pin out in the direction of the arrow mark on the link. Do the same on the other side of the link.

NOTE: There are several types of fixing pins, such as constricted pin (Fig. 1) or a bobby pin shaped pin (Fig. 2).

2. Reassembly

Reverse the above procedure by inserting the pin in the opposite direction of the arrow. Make sure to press down the fixing pin securely into the link.

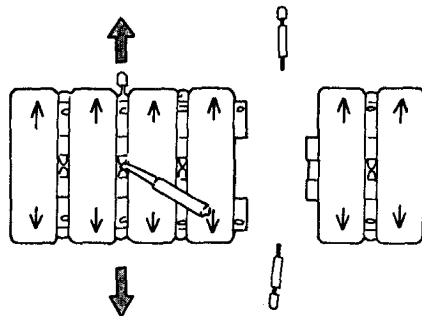


Fig. 1

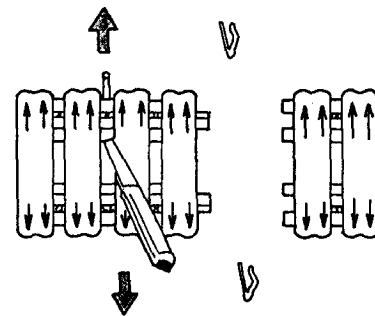


Fig. 2